

Installation Manual

SEAT ALTEA XL 5DR
SEA-ALXL-5-A



COMPONENTS INCLUDED



X2



X2



X2



CL-M02 x 6



CL-M09 x 4





Installation

SEAT ALTEA XL 5DR
SEA-ALXL-5-A

SIDE SHADE INSTALLATION



x2

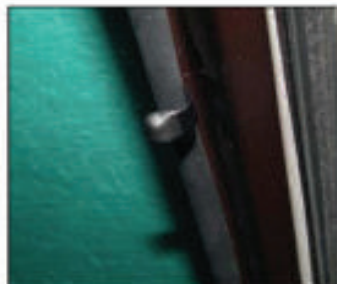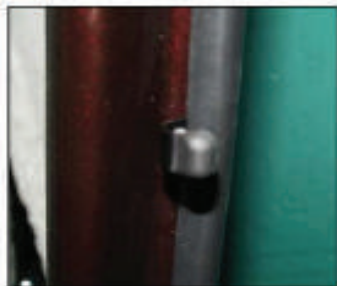


Installation

SEAT ALTEA XL 5DR
SEA-ALXL-5-A



SIDE SHADE INSTALLATION

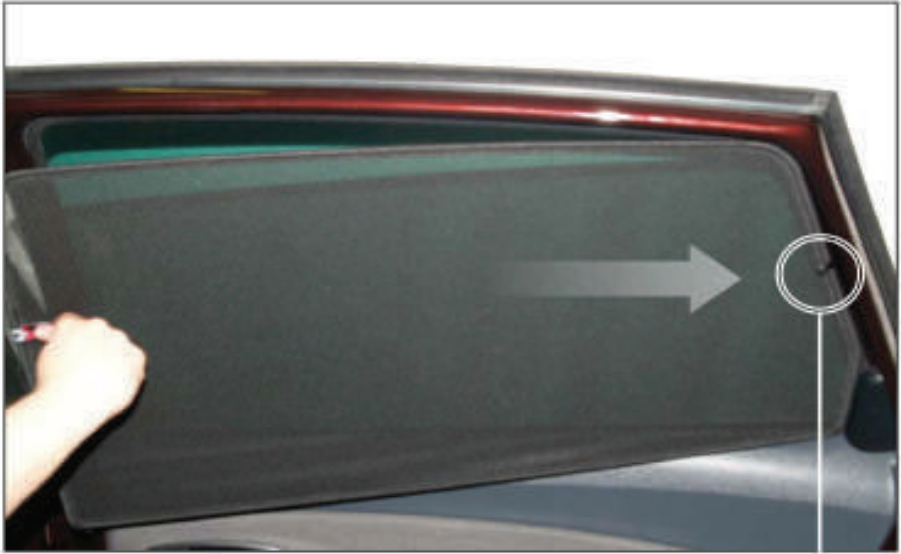


Installation

SEAT ALTEA XL 5DR
SEA-ALXL-5-A



SIDE SHADE INSTALLATION

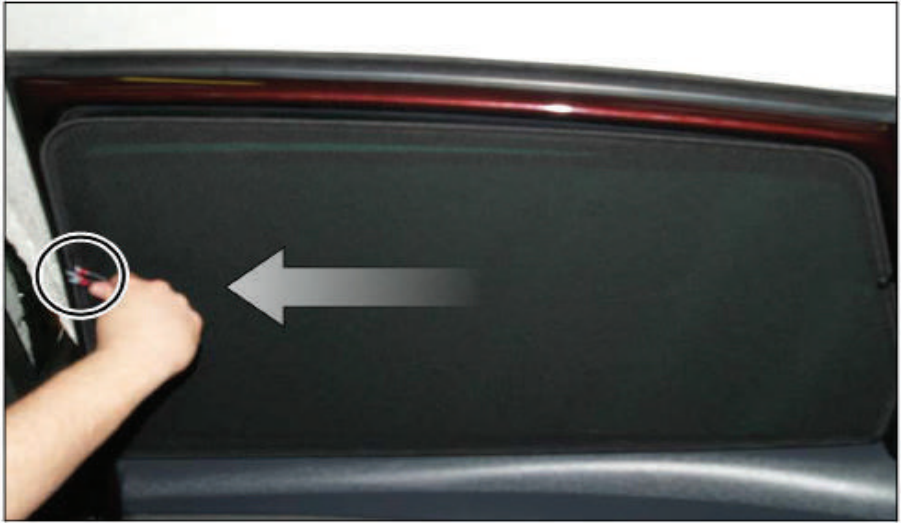

X2

Installation

SEAT ALTEA XL 5DR
SEA-ALXL-5-A



LOAD AREA SHADE INSTALLATION




Installation

SEAT ALTEA XL 5DR
SEA-ALXL-5-A



LOAD AREA SHADE INSTALLATION

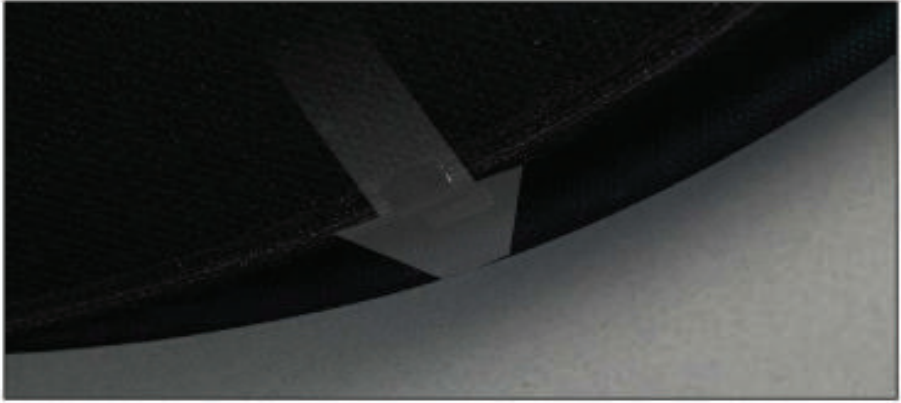


Installation

SEAT ALTEA XL 5DR
SEA-ALXL-5-A



LOAD AREA SHADE INSTALLATION

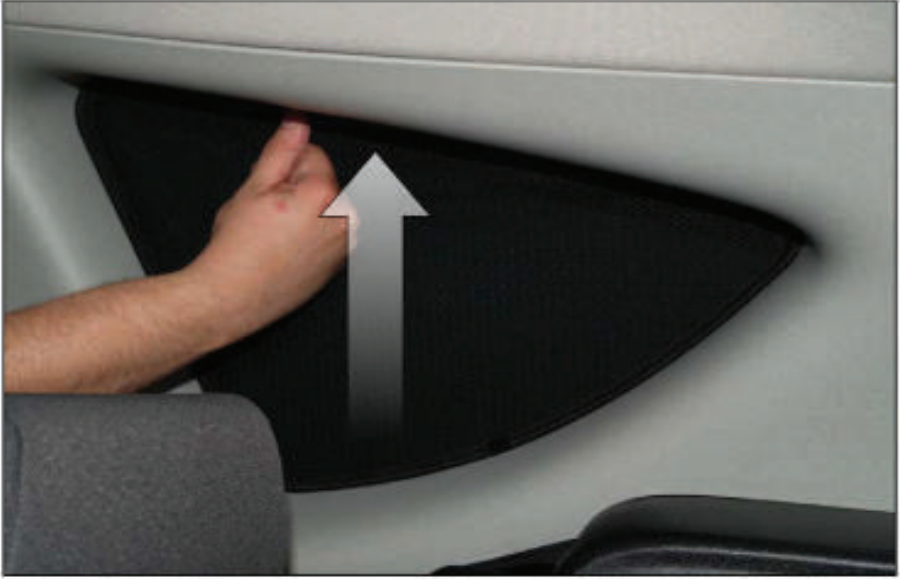

X2

Installation


SEAT ALTEA XL 5DR
SEA-ALXL-5-A



REAR SHADE INSTALLATION



X2


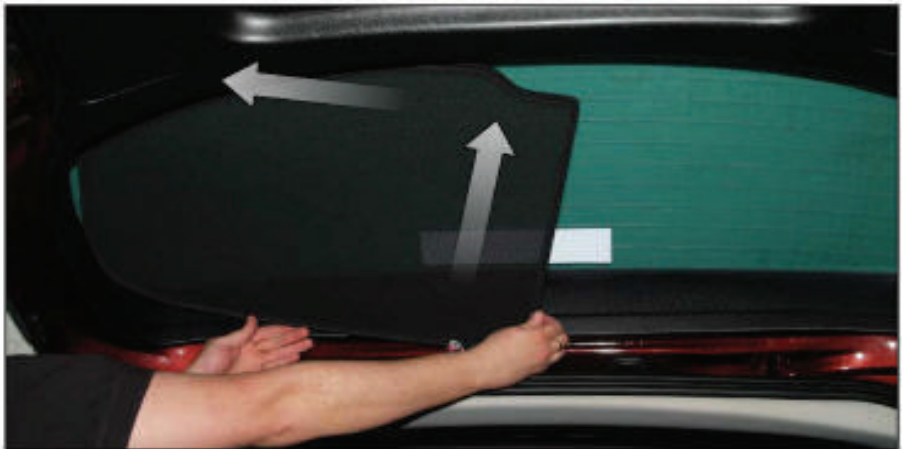


Installation

SEAT ALTEA XL 5DR
SEA-ALXL-5-A



REAR SHADE INSTALLATION

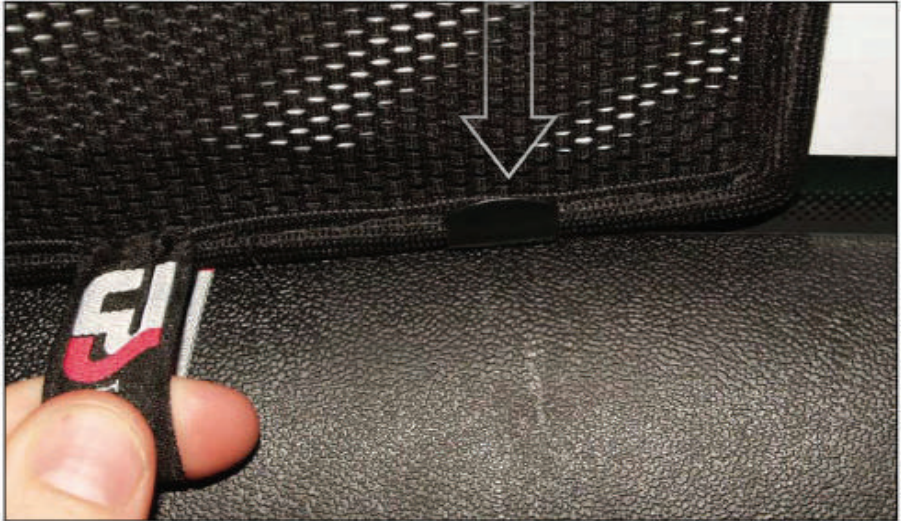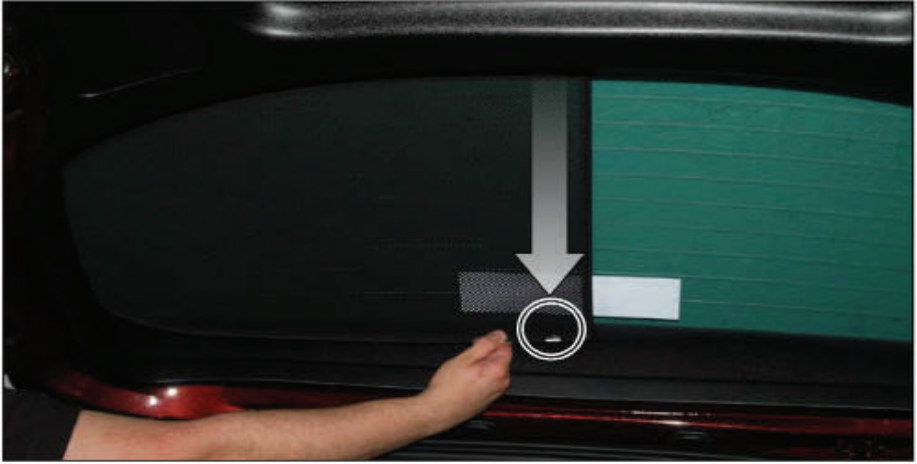

Installation

SEAT ALTEA XL 5DR
SEA-ALXL-5-A



REAR SHADE INSTALLATION

