

# Installation Manual


**MITSUBISHI LANCER 4DR  
MIT-LANG-4-A**



## COMPONENTS INCLUDED



x 2

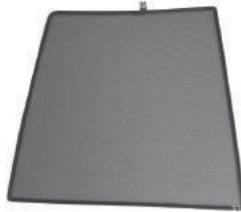


x 2




**CL-M01 x 8**



**CL-P03 x 4**

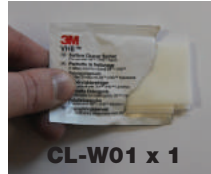

**CL-W01 x 1**


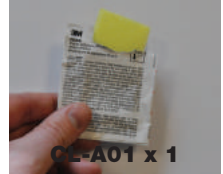


**CL-A01 x 1**

# Installation

MITSUBISHI LANCER 4DR




MIT-LANG-4-A

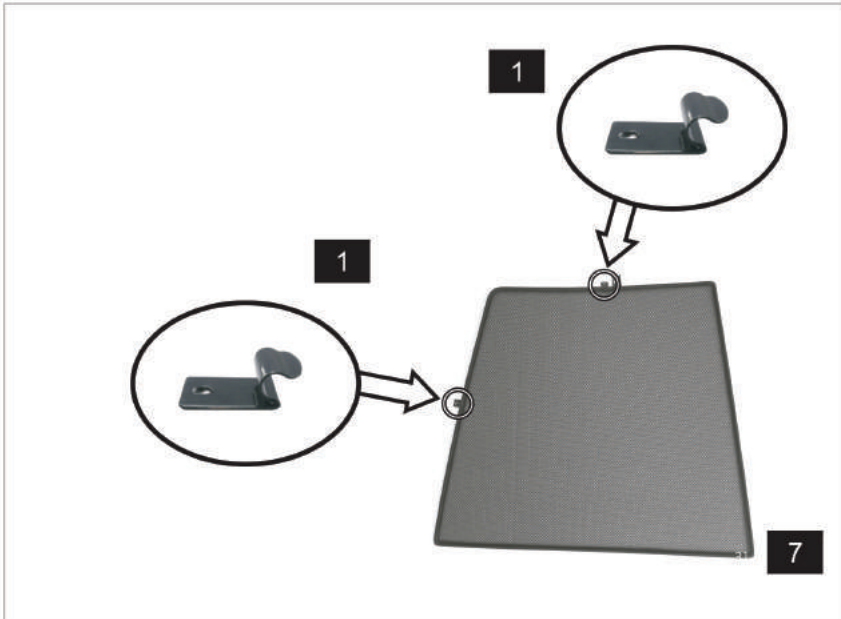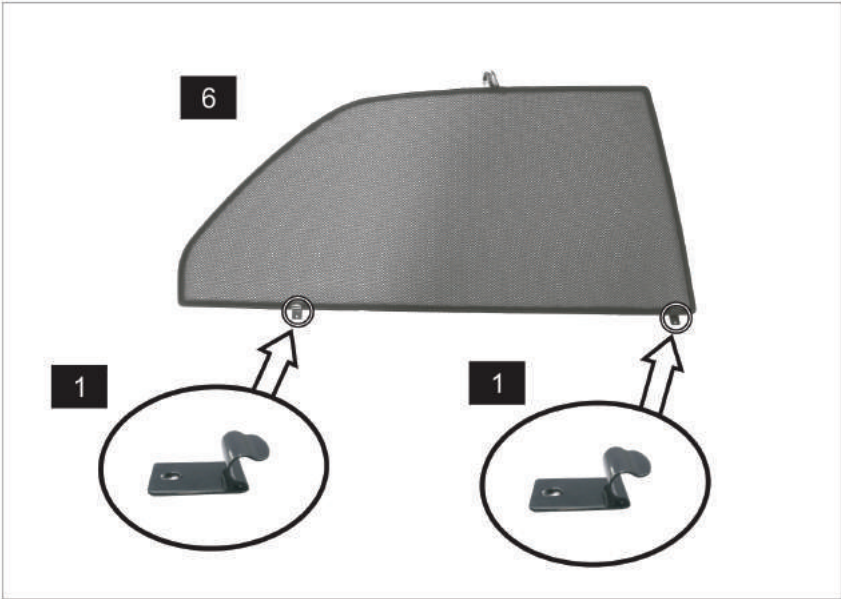

# Installation

MITSUBISHI LANCER 4DR

MIT-LANG-4-A

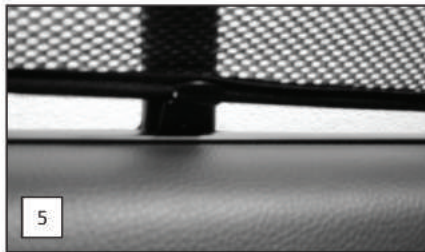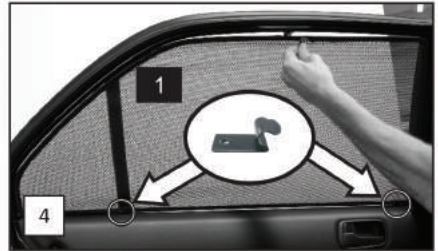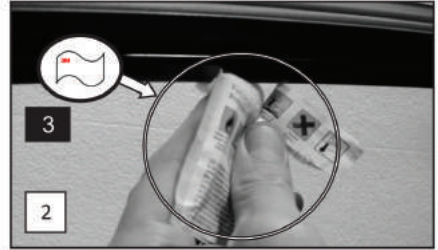

# Installation

MITSUBISHI LANCER 4DR  
MIT-LANC-4-A

