Step-by-step

Step-by-step guide to windscreen replacement

Made with our K4603

Step 1



Mount the three suction cups at the very edge of the windscreen.

The middle suction cup is adjustable and adjusts to the curve of the windscreen.

Step 2




Loosen the suction cups, by turning the handles, before mounting the support arm.

Doing this, allows you to angle the arm/suction cups in any way you need. This feature means that the tool can be used on any vehicle.

Attach the support arm into the swingpin.
1) Swingpin
2) Support arm

The positioning pin/the height of the swingpin is only affected if the little grey pin is pulled.

Step 3

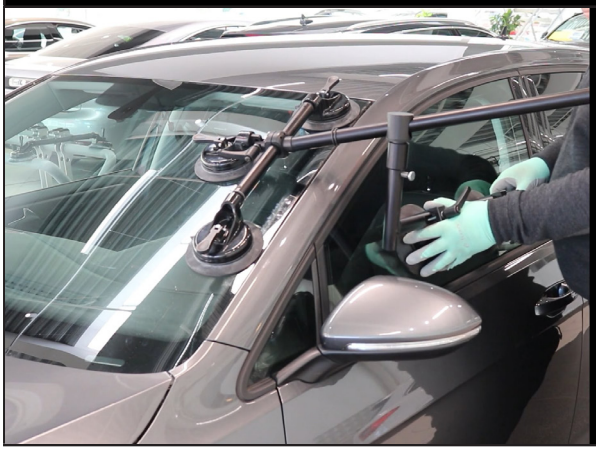

Adjust the positioning and attach the suction cups to the side window, with the pumps.

The pumps create vacuum under the suction cups and assure a secure attachment.

The vacuum suction cups are also adjustable for split windows.

Step 4



You can now lock the suction cups in place.

Step 5



Roll the o-rings up to the swingpin.

The o-rings limit the movements, so the placement of the new windscreen stays the same.

Step 6



The support arm is adjustable in many ways. You can adjust the angle (as mentioned in step 2) and you can adjust the height.

It extends up to 13 cm.
If you pull out the grey pin, you can adjust the height as desired (it has 8 levels)

Step 7



Mount suction cups so that it is easier to lift the windscreen.

Step 8



The adjustable part of the support arm should be extended by approx. 4-10 cm before mounting the new windscreen.

This is done to avoid smearing the glue during installation.

Step 9



Attach the three suction cups at the very edge of the new windscreen, exactly as you did on the old windscreen. This way the placement stays the same.

Flip up the windscreen 90°

Lift the windscreen.

Attach the swingpin to the adjustable part of the support arm.

Step 10



You can now install the new windscreen.

Once placed, there should be a gap on the right side of the windscreen (where the 1-man installation tool is attached).

Now you can pull out the pin and gently lower the windscreen into position.

Enjoy your finished result!